

MAKE BALLY 6000 OR 5500 PRO SLOT NO HOPPER PAY

Press test button until 11 is seen.

**Use bet max to get to the following settings
then press spin to increment and change to decrement
value to set each one as shown below.**

set 54 to 0000

set 56 to 0000

set 51 to 9999

set 58 to 9999

**remove hopper and jumper machine side hopper plug
pins 6 to 10.**

To cashout hit cashout then turn key switch.

**To still play coins and bills set option 81 to 0001
if 81 is available.**