

REINITIALIZE PE PLUS POKER AFTER SOFTWARE OR BATTERY CHANGE

Any time you put in different game software or replace a dead battery the game must be reconfigured.

FRESH BATTERY:

Start with the door open, computer board installed, turn on power:

CMOS ERROR:

1. Press and hold in the white test button for 5 seconds until you hear a *DING*, if no ding is heard your volume may be turned down or you have a defective speaker.
2. Close the door and make sure the door latch is all of the way down.
3. Turn the Jackpot Reset key on the side of the game and release.

EEPROM ERROR:

1. Open the door and tap the white test button.
2. Close the door and make sure the door latch is all of the way down.

THE GAME SHOULD COME UP AND BE READY TO PLAY.

Setup options can now be set by opening the door and tapping the white test button to scroll through the menu options. Set credit limits, set auto play, etc. by following the options on each page.

SOFTWARE CHANGE:

GAME TYPE MISMATCH ERROR:

1. Open the door and press and hold in the white test button for 3 seconds then close the door and the game should come up and be ready to play.
2. Setup options can now be set by opening the door and pressing the test button to advance through the menu options.

If you have any questions about setup options give us a call at KLAR and we can help.

OFFICE - 702-363-9998
CELL - 702-271-1859

COMPLEMENTS OF KLAR Electronic Slot Service

www.slotmachinerepair.com

klar.slotrepair@gmail.com