

# HOW TO ELIMINATE THE BILL VALIDATOR CASH DOOR OPEN AND DROP DOOR OPEN ERROR MESSAGES IN BALLY GAMES WITH A SIDE BILL STACKER WITH DOOR


THE GOAL IS TO ELIMINATE THE BILL DROP DOOR SWITCH AND THE SWITCH THAT IS ACTUATED WHEN THE BILL STACKER IS INSERTED.

WHEN SUCCESSFUL THE BILL STACKER CAN BE REMOVED COMPLETELY AND THE BILLS WILL FALL INTO THE EMPTY CAVITY.

SOME GAMES HAVE A BOARD PLUGGED INTO THE LEFT SIDE OF THE BILL VALIDATOR. IT WILL HAVE A SINGLE ROW PLUG WITH 6 WIRES ON IT.

THE PLUG IS SHOWN IN THE BELOW IMAGE. CUT THE WIRES AS SHOWN AND WIRE NUT AS DIRECTED THEN PLUG IT BACK INTO THE SIDE BOARD.

IF THERE IS NO SIDE BOARD THE SAME WIRE COLORS ARE CONNECTED TO THE DOOR AND BILL DROP SWITCHES. CUT THE WIRES OFF OF THE SWITCHES AND WIRE NUT THE COLORS FOUND AS SEEN IN THE PICTURE.

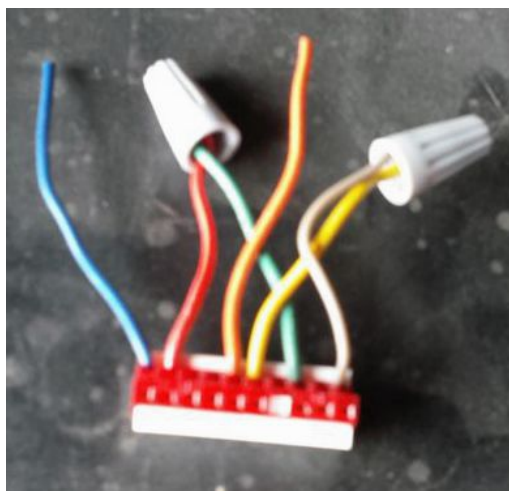

## **BALLY ELIMINATE BVD SWITCHES**

**TOP: CASH TRAY SWITCH**

**ORG**

**YEL**

**GRY >>>> TIE YEL AND GRY TOGETHER**

**BOTTOM: CASH DOOR SWITCH**

**BLU**

**RED**

**GRN>>>> TIE RED AND GRN TOGETHER**

COMPLEMENTS OF K-LAR ELECTRONIC SLOT REPAIR

[WWW.SLOTMACHINEREPAIR.COM](http://WWW.SLOTMACHINEREPAIR.COM)