

NewLifeGames.net

On Line Tech Forums
Slots, Poker, Amusement, and Coin-Op Games

Some error are just stubborn and will not clear after following the procedures below. These types of errors are usually cleared by performing a RAM Clear. There's a couple of way of doing this.

1. Get a Clear chip IVC103 or the like (note a clear and a set chip are two different things).
2. Sometimes you can get the game chip to clear ram by swaping game chips with a much older/much newer chip. I used SP731/SP1271 combination when I didn't have clear chip. Basically you install the other game chip, go through the clear procedures listed above and your error should clear. Then you can put back your other game chip (if that's what you want) and go through the clear procedures listed above.

Note that doing any of these two will require a SET chip to re-enable your bill validator, so make sure you have one.

Tilt Code	Malfunction	Clearing the Tilt
12	Low battery	Replace battery. Open and close door.
21	Coin-in	Open and close door.
23	Excessive extra coins in	Open and close door.
3100	Extra coin out	Open and close door.
3200	Coin jam in hopper	Open and close door.
3300	Hopper empty	Open and close door.
34_0	Hopper optics blocked	Open and close door.
35_0	Coin out reverse direction detected	Open and close door.
36_0	Coin optic exit time too short	Open and close door.
36_1	Coin optic exit time too long	Open and close door.
41	Reel 1 tilt	Open and close door.
42	Reel 2 tilt	Open and close door.
43	Reel 3 tilt	Open and close door.
44	Reel 4 tilt	Open and close door.
45	Reel 5 tilt	Open and close door.
49	Reel mechanism disconnected	Reconnect reel mechanism. Open and close door.
61	Bad CMOS RAM	Open door and press self test button for 2 to 3 seconds. See 61_1.
61_1	Game data reset	Close door and turn jackpot reset key.
61_2	Recoverable CMOS error	Open door and press self test button for 2 to 3 seconds. See 61_1.
61_3	Hardware malfunction	Open door and press self test button for 2 to 3 seconds. See 61_1.
62_0	Bad game PROM	Replace game PROM.
62_1	Bad data PROM	Replace data PROM.
65_0	Bad EEPROM device	Replace EEPROM with a blank one.
65_1	Bad EEPROM data	Open door and press self test button for 1 to 2 seconds.
65_2	Game type mismatch	Open door and press self test button for 1 to 2 seconds.
65_3	Game options & meters not in most current format	Recover options & meters by using correct set chip. OR Turn jackpot reset key to continue power-up procedure. Game will be upgraded to most current format. See 65_1 or 65_2.
66	Game PROM changed	Open door. Turn machine off, then on.
67	Data PROM changed	Open door. Turn machine off, then on.

Tilt Code	Malfunction	Clearing the Tilt
68	Non-compatible data PROM	Install correct data PROM.
99 1	Stacker jam	Open and close door.
99 2	Cash box removed	Open and close door.
99 4	Cash box full	Open and close door.
99 5	Hardware error	Open and close door.
99 6	Reverse bill detected	Open and close door.

FAIR USE NOTICE:

This site contains copyrighted material the use of which has not always been specifically authorized by the copyright owner. We make such material available in an effort to advance awareness and understanding of the issues involved. We believe this constitutes a fair use of any such copyrighted material as provided for in section 107 of the US Copyright Law. In accordance with Title 17 U.S.C. Section 107, the material on this site is distributed without profit to those who have expressed a prior interest in receiving the included information for research and educational purposes.

For more information please visit: <http://www.law.cornell.edu/uscode/17/107.shtml>.

If you wish to use copyrighted material from this site for purposes of your own that go beyond fair use, you must obtain permission directly from the copyright owner.

NewLifeGames.net is optimized for a minimum screen resolution of 1024x768 pixels.
If you find a error please email rickhunter@newlifegames.net