



044 BOARD - PREVENT DSA AND SHA ERRORS USING THE 039 BOOT/CLEAR/KEY CHIP

HOLD IN THE MPU BOARD SETUP BUTTON AND TURN ON THE GAME.
YOU WILL SEE THE FOLLOWING DEVELOPER BOOT SCREEN.
SELECT OPTIONS.

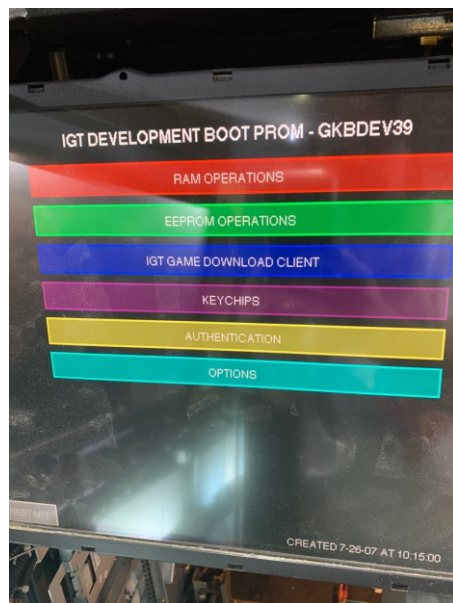

DESELECT PERFORM SHA AND DSA CHECK.
THEN SELECT RESTART.
THE GAME SHOULD BOOT UP NORMALLY.

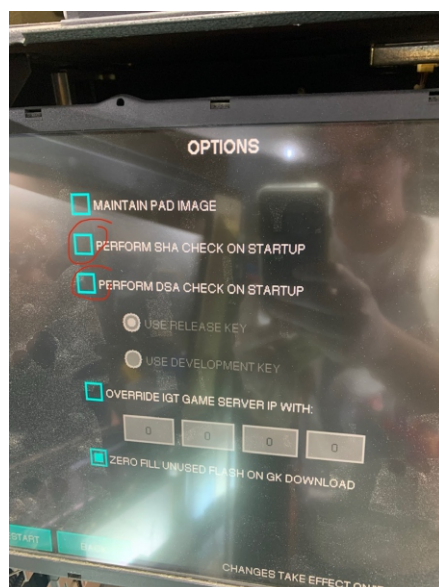

complements of KLAR Electronic Slot Repair

www.slotmachinerepair.com