



MODIFY A 16 BUTTON 9 PIN KEYPAD TO MAKE A BALLY KEYPAD

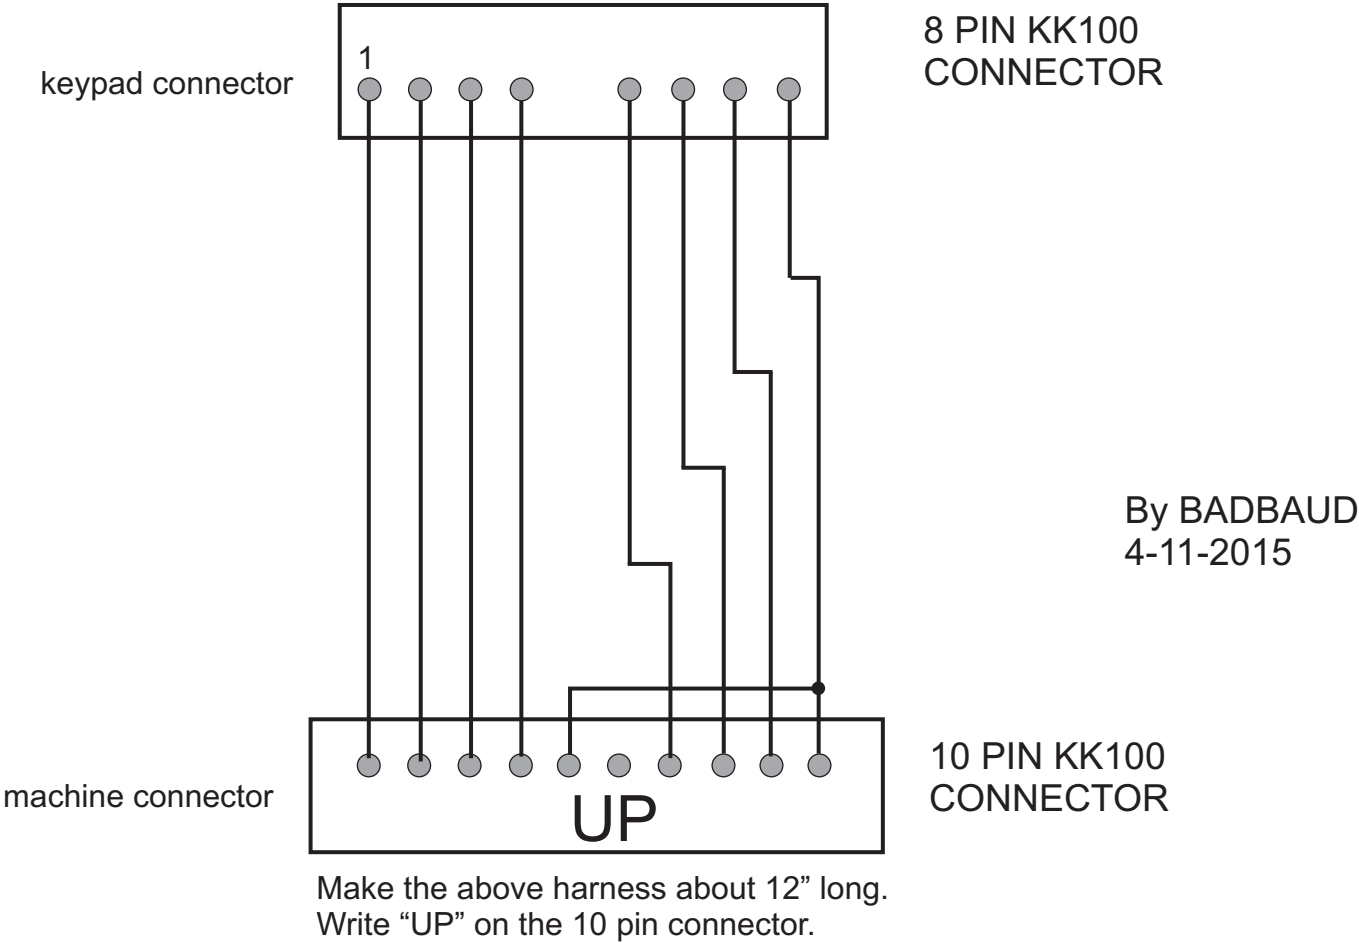

BACK OF KEYPAD

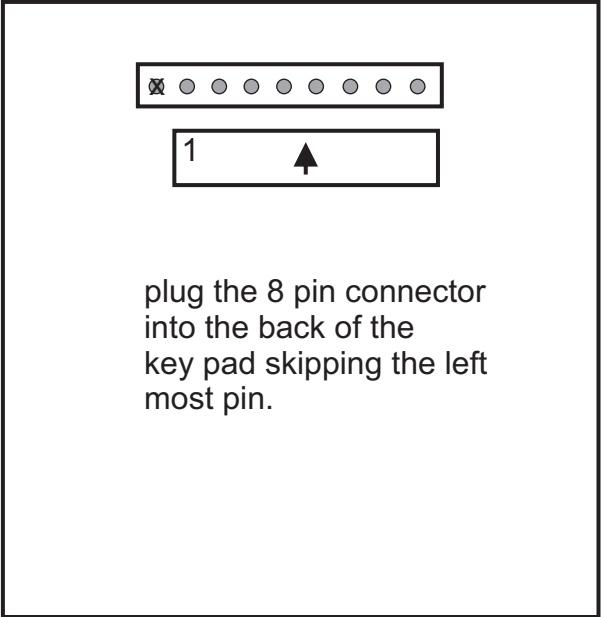

FRONT OF KEYPAD

Peel off the old numbers plastic over lay on the keypad
and write in the following notations where shown.

