


HOW TO REMOVE A CERONIX MONITOR BOARD


1. SLIP A LONG FLAT BLADE SCREWDRIVER UNDER THE HIGH VOLTAGE LEAD ON THE TUBE MAKING SURE THE METAL OF THE SCREWDRIVER STAYS IN CONTACT WITH THE METAL CHASSIS OF THE MONITOR.




2. WHILE MAINTAINING CONTACT WITH THE METAL FRAME AND THE CLIP UNDER THE RUBBER CAP FOLD THE CAP OVER AND USE THE SCREWDRIVER TO COMPRESS THE MOUNTING CLIP AND PULL THE HIGH VOLTAGE LEAD AWAY FROM THE TUBE HOLE.

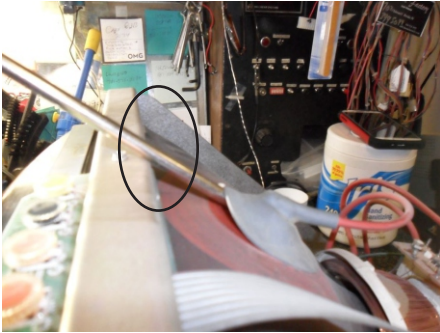

3. PULL THE NECK BOARD OFF OF THE TUBE NECK AND DISCONNECT THE GREEN GROUND WIRE FROM THE NECK BOARD.

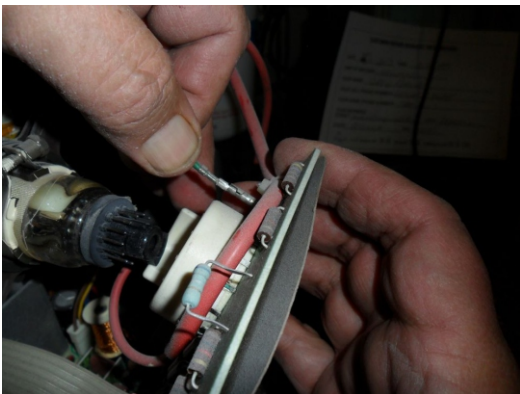


4.

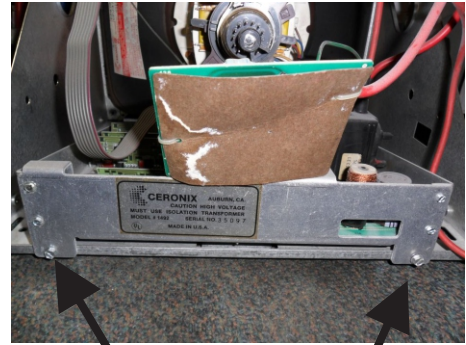

REMOVE THE TWO BOARD MOUNTING SCREWS.

5. UNPLUG THE 4 REMAINING CABLES CONNECTED TO THE MAIN BOARD.

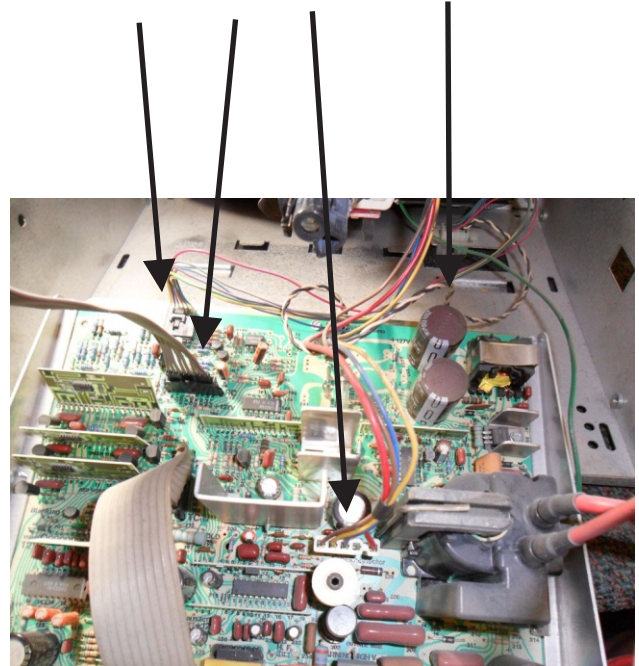

COMPLEMENTS OF
K-LAR ELECTRONIC SLOT SERVICE
KLAR.SLOTPAIR@GMAIL.COM